

HigherPower Manual v1.0

List of Content

- System Requirements
 - Getting Started
 - Connecting to Reciever
 - Changing Door Name
 - Downloading the App
 - Initial App Start
 - Apple Switching Receiver Connection
 - Android Switching Receiver Connection
-

System Requirements

Systems that wish to utilize the HigherPower WIFI Phone App must have the minimum system specs.

Apple Devices

iOS 13 or later

Android Device


Version 10 or later

Getting Started


Connecting to System Receiver

1. Open WIFI Settings within your mobile device/computer.
2. Select the default WIFI Connection "HPHG3A522".


PC/Laptop

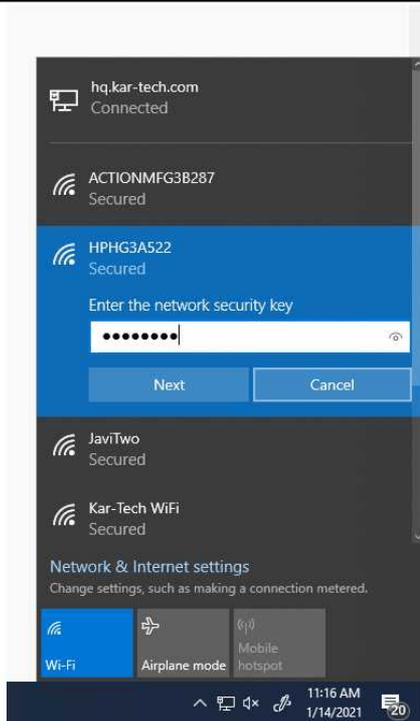

Android

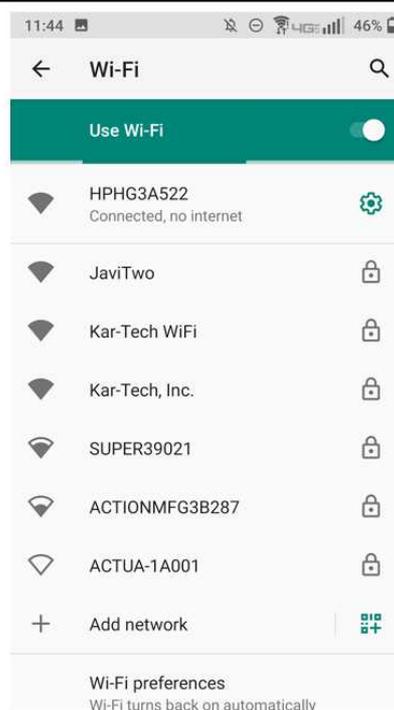

iOS

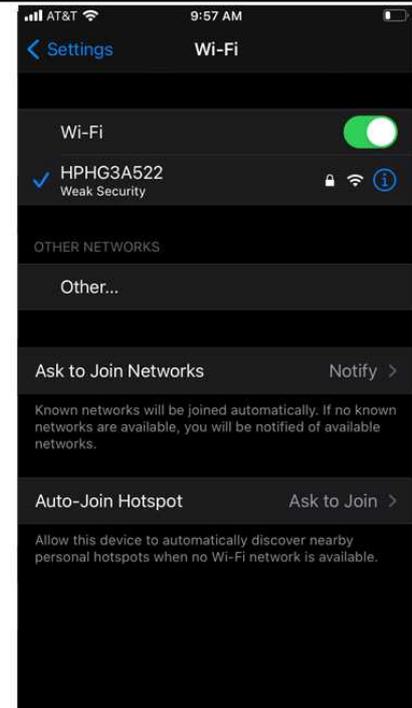

3. Once prompted insert default system password 89908990.
4. Open your web browser and enter 192.168.1.1
5. Please wait for 5 seconds for the User Agreement to appear.
6. Click on the checkbox at the bottom of the page and click **Agree**

MOBILE APPLICATION TERMS AND CONDITIONS OF USE

WELCOME

Welcome to the Higher Power Hydraulic Doors Remote Door Application. Please read these terms carefully before using the mobile application (this "App"). By downloading, accessing or using this App you agree to be bound by these terms and conditions of use, as may be amended from time to time (the "Terms and Conditions").

These Terms and Conditions govern the use of the App. These Terms and Conditions are subject to change without notice. Therefore, if you are a regular user of the App, please review these Terms and Conditions regularly.

Initially, please note that this App is intended for adult use only.

GENERAL TERMS AND CONDITIONS

Before each use of the App, you, as the person using the App, agree and warrant that:

- You are over the age of 18.
- You are in line of sight of the door system.
- There are no obstacles in the way of the door opening or closing.
- You are within 70 feet of the door opening mechanism.
- The App may not work while you are within an airplane.

DISCLAIMER

USE OF THE APP IS AT YOUR OWN RISK. THE APP IS PROVIDED ON AN "AS IS" BASIS. TO THE MAXIMUM EXTENT PERMITTED BY LAW: (A) HIGHER POWER HYDRAULIC DOORS, INC. DISCLAIMS ALL LIABILITY WHATSOEVER, WHETHER ARISING IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE IN RELATION TO THE APP AND ITS CONTENTS, AND (B) ALL IMPLIED WARRANTIES, TERMS AND CONDITIONS RELATING TO THE APP (WHETHER IMPLIED BY A STATUTE, COMMON LAW OR OTHERWISE), INCLUDING (WITHOUT LIMITATION) ANY WARRANTY, TERM OR CONDITION AS TO MERCHANTABILITY, ACCURACY, COMPLETENESS, SATISFACTORY QUALITY, PERFORMANCE, FITNESS FOR A PARTICULAR PURPOSE OR ANY SPECIAL PURPOSE, AVAILABILITY, NON-INFRINGEMENT, INFORMATION ACCURACY, INTER-OPERABILITY, QUIET ENJOYMENT AND TITLE, OR ARISING FROM COURSE OF DEALING OR USAGE OF TRADE, ARE, AS BETWEEN HIGHER POWER HYDRAULIC DOORS, INC. AND YOU, HEREBY EXCLUDED. IN PARTICULAR, BUT WITHOUT PREJUDICE TO THE FOREGOING, WE ACCEPT NO RESPONSIBILITY FOR ANY TECHNICAL FAILURE OF THE INTERNET AND OR THE APP, OR ANY DAMAGE OR INJURY TO USERS OF EQUIPMENT OR THIRD PARTIES AS A RESULT OF OR RELATING TO THE USE OF THE APP. YOUR STATUTORY RIGHTS ARE NOT AFFECTED.

TO THE FULL EXTENT PERMITTED BY LAW, HIGHER POWER HYDRAULIC DOORS, INC. SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING DAMAGES FOR LOST PROFITS, LOST REVENUES, LOSS OF USE OR OTHERWISE.

TRADEMARKS

Nothing contained on the App should be construed as granting by implication, estoppel, or otherwise, any license or right to use any trademark displayed on the App without our permission. Misuse of any trademarks or any other content displayed on the App is prohibited.

INDEMNIFICATION

You agree to indemnify and hold Higher Power Hydraulic Doors, Inc. and its subsidiaries, affiliates, officers, directors, agents and employees (collectively, the "Indemnified Parties") harmless from any loss, liability, claim, demand, including reasonable attorney fees, made by any third party due to or arising out of your use of the App, or your violation of these Terms and Conditions.

GOVERNING LAW/DISPUTES

By using this App, you agree that these Terms and Conditions and any dispute about or involving the App shall be governed by the laws of the State of Michigan without regard to conflict of law provision and you agree to personal jurisdiction by and venue in the state and federal courts of the State of Michigan.

OTHER

The failure of Higher Power Hydraulic Doors, Inc. to exercise or enforce any right or provision of these Terms and Conditions shall not constitute a waiver of such right or provision. If any provision of these Terms and Conditions is held invalid, the remainder of the Terms and Conditions shall continue in full force and effect. The section titles in these Terms and Conditions are for convenience only and have no legal or contractual effect.

I have read and agree to the terms and conditions

Agree

0

Changing the Door Name and Door Password

Caution once the Door name has been changed, you will need to go to your device's wifi settings and reconnect with the new door name and door password.

1. Connect to receiver.



2. Click on **Wifi Configuration**

3. Enter password in the window popup that appears.



Wi-Fi Configuration

Home

Enter Gate Configuration Password

1262

OK

Cancel

Current Value:

New Value:

4. Enter desired door name in the field labeled **New Value**.
5. Scroll the page and click on Save.



Wi-Fi Configuration

Home

Channel

Current Value: 1

New Value:

Wi-Fi Name(SSID)

Current Value: HPHG3A522

New Value:


Password

Current Value: 89908990

New Value:

Downloading the App



1. Open either App Store or Google Play Store.
2. In the search bar type "Higher Power Wifi Remote"

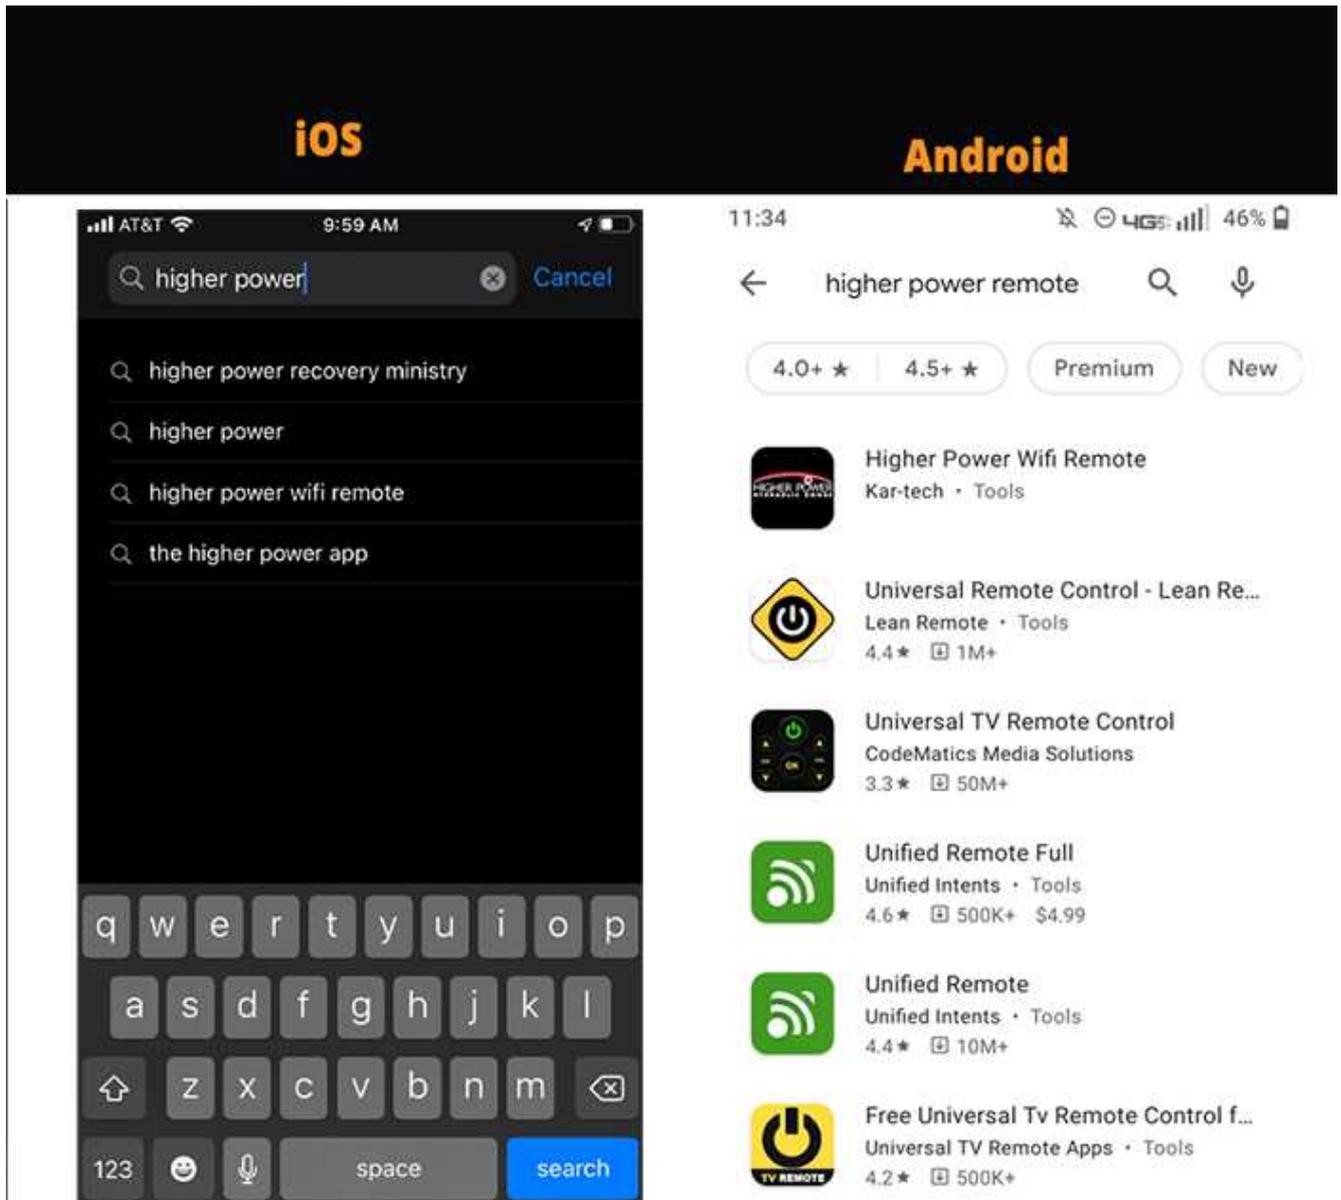

3. Please click Install or the Get icon on Apple.

ios

Android

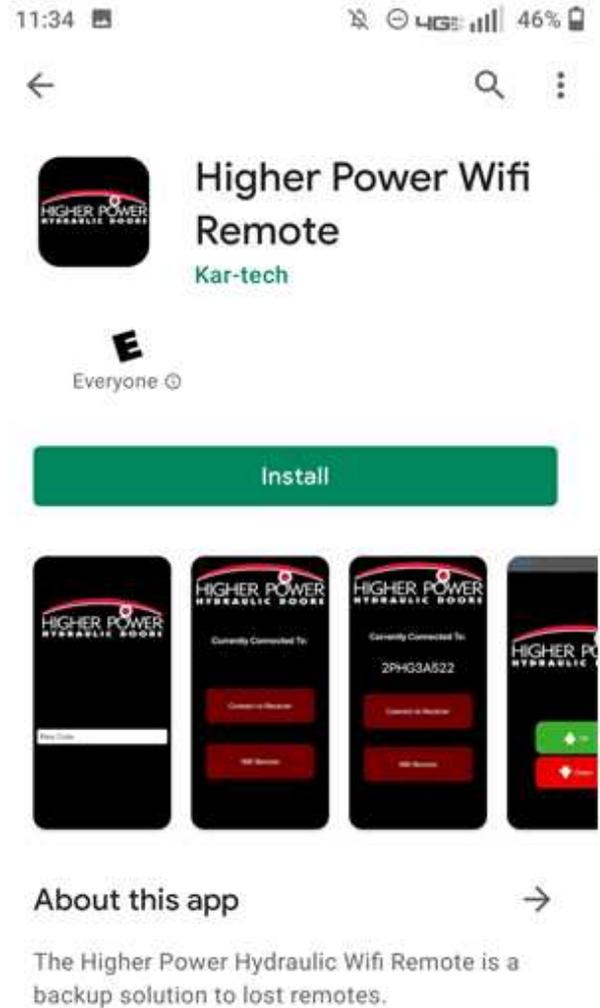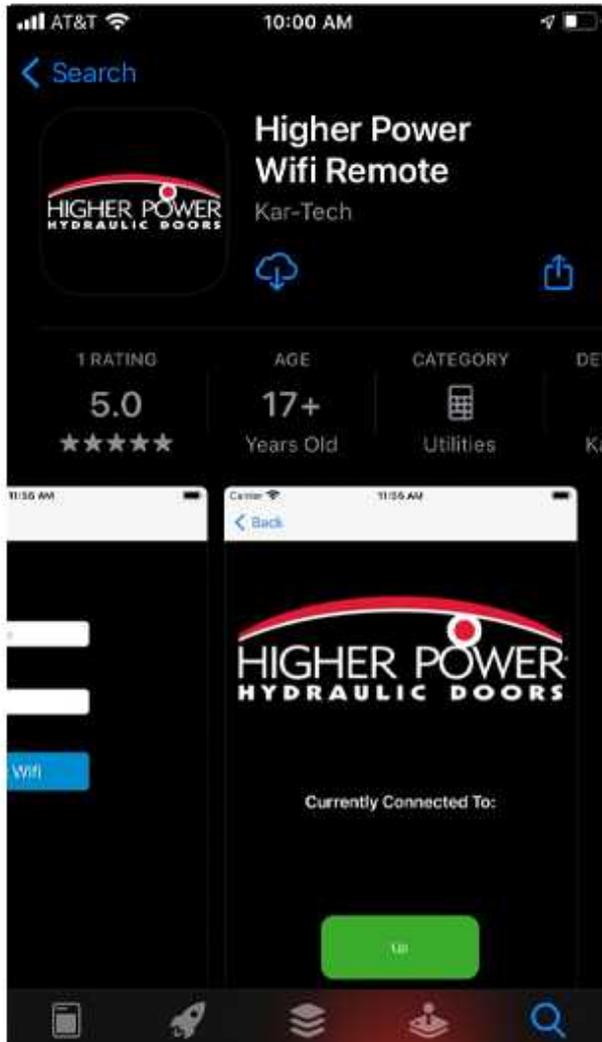

4. Once downloaded a new icon should appear on your phone's screen.

Initial App Start

When you start your app for the first time, please be aware that there are some protocols that must be addressed before app use.

User Agreement


A user must read and accept the user terms in order to use the app.



Permission Request

Users must allow the app to have location functionality within their device in order to find receivers nearby.

If these request do not appear, please refer to System Requirements

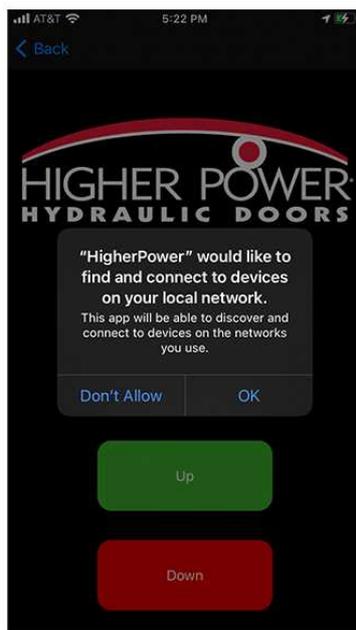

Troubleshooting

If you are having issues with your app please take the following notes into account.

- Devices fight for the best connectivity available so it is not uncommon for your device to automatically switch between your local wifi and the receiver wifi chip. This is easily fixed by going into your device's wifi settings and switching the "automatically switch wifi" feature off.
- Often times devices do not consider a connection to the receiver as a valid wifi connection and will either ask to confirm your action like below or users will have to manually allow the connection to be established through their device wifi settings.




- A device's data feature may interfere with receiver and wifi communication. If you want a reason why, please refer to the first bullet above. For this reason, for best results please consider turning off data when using the app.
-

Connecting to Receiver within App (Apple).


Users please be aware this version is Apple only. Wifi must be enabled and Device Permission must be granted in order for app to work

1. Open Wifi App from an Apple Device.
2. Enter App Password.

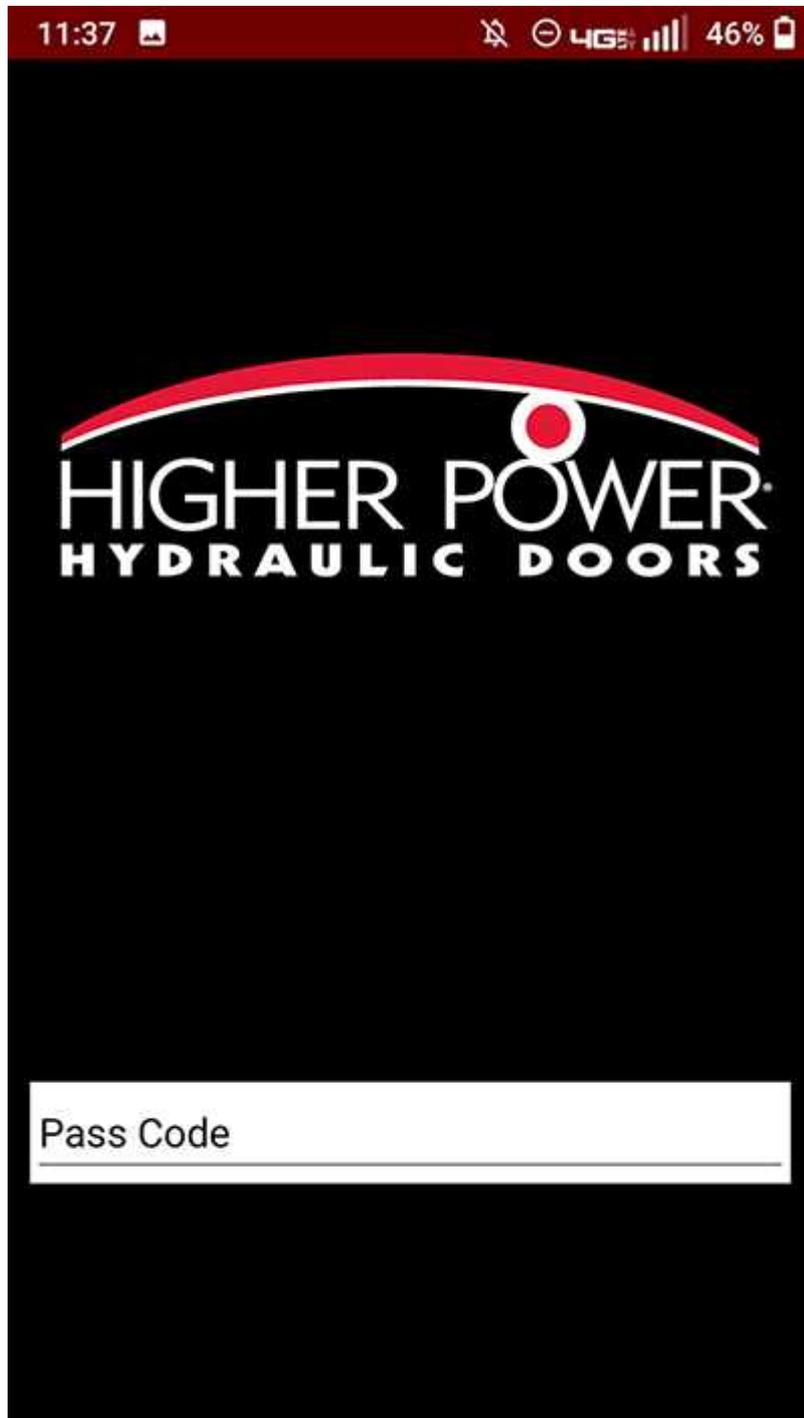


If you have previously connected to the receiver through the device wifi settings, it will look like below.


3. Tap **CONNECT TO RECEIVER**.

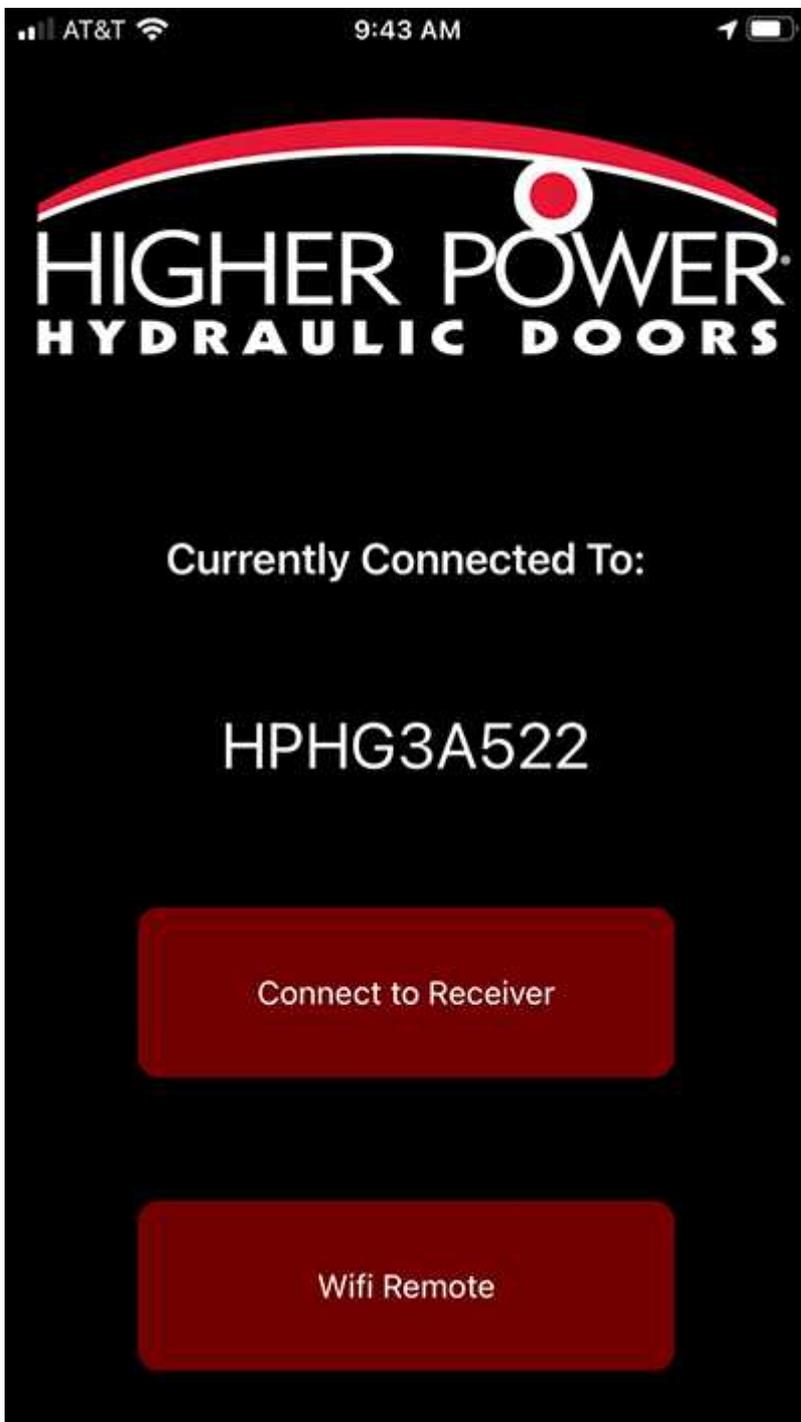


4. Enter the desired door name and the password for the receiver and tap Connect Wifi.

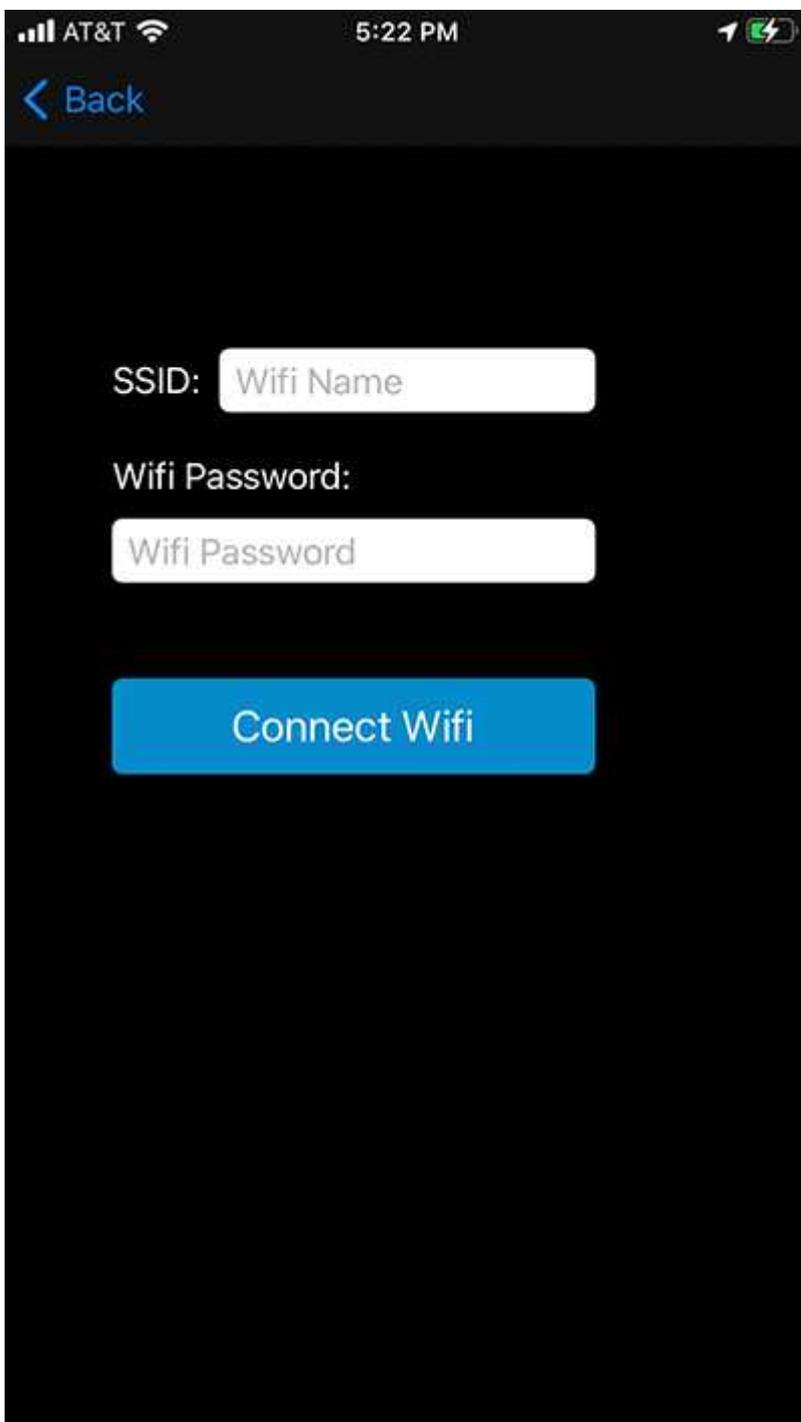

User may need to confirm connection transfer

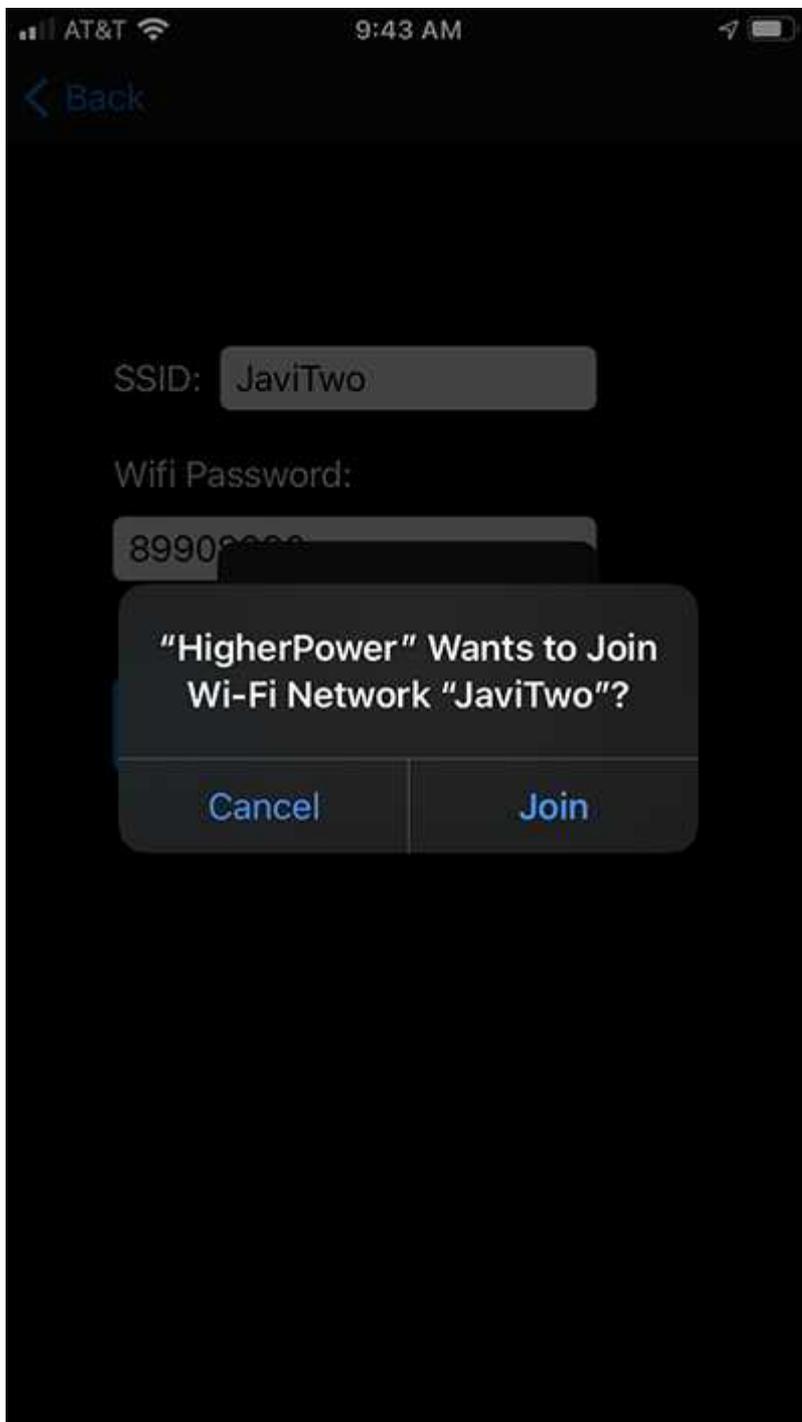

5. Wait for the connection to establish. It takes a few seconds. Once completed you will be transported to the main screen.

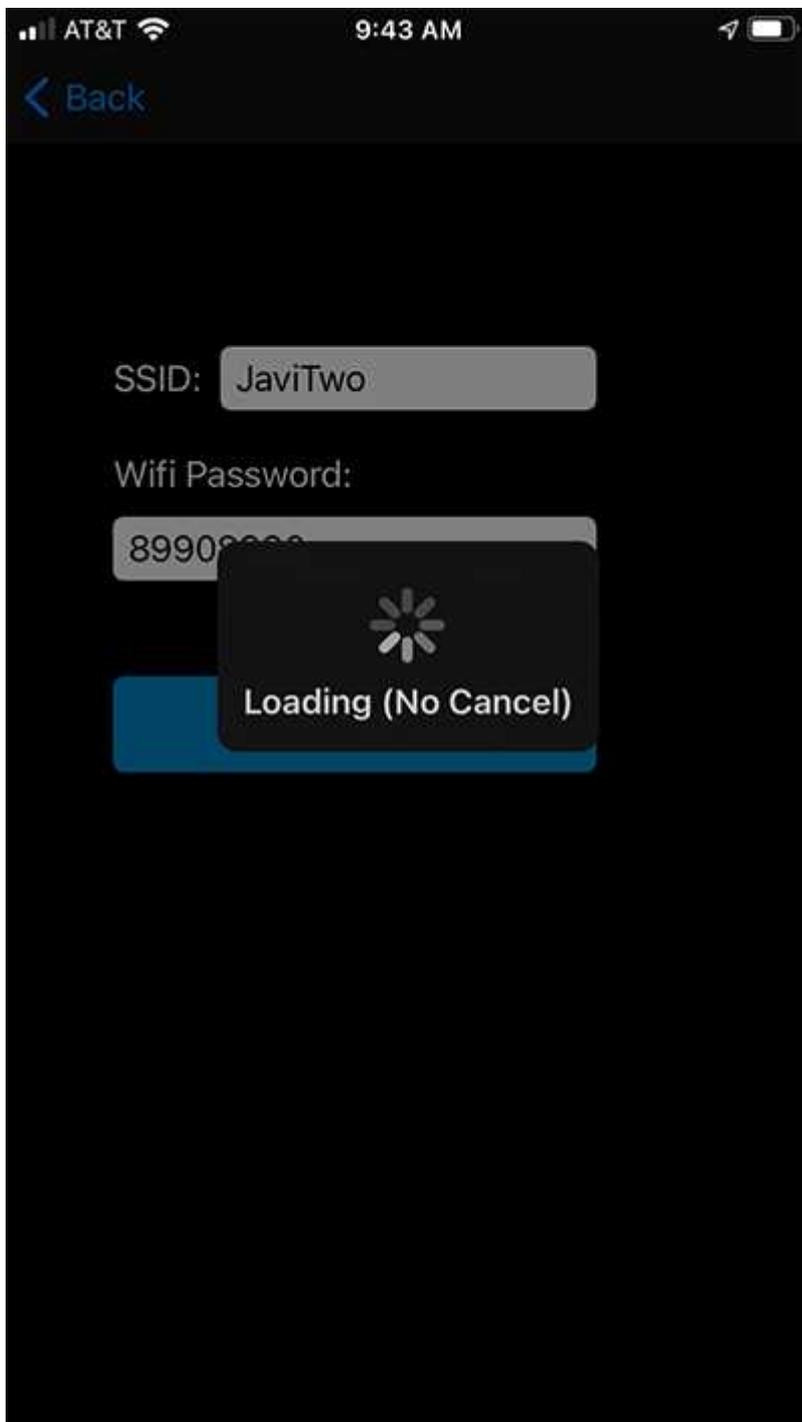

Troubleshooting

If a user cannot establish a connection to the desired receiver, please check device permissions and wifi settings.

Often when these issues arise the main screen will look like the following:

Wifi Not Enabled

11:37

4G 46%




Currently Connected To:

CONNECT TO RECEIVER

DISCONNECT RECEIVER

WIFI REMOTE


Location Not Available

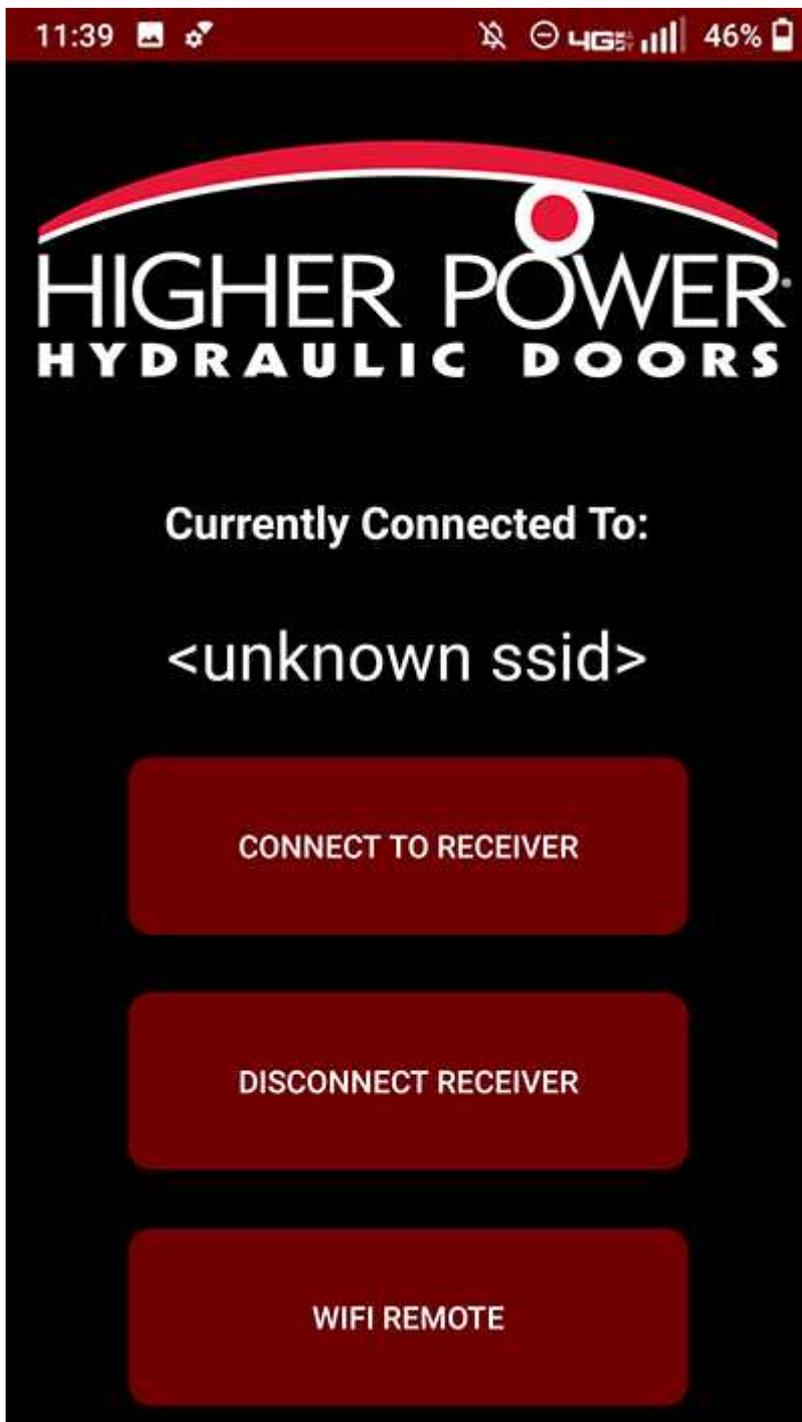

Connecting to Receiver within App (Android).


Users please be aware this version is android only. Wifi must be enabled and Device Permission must be granted in order for app to work

1. Open Wifi App from Android Device.
2. Enter App Password.

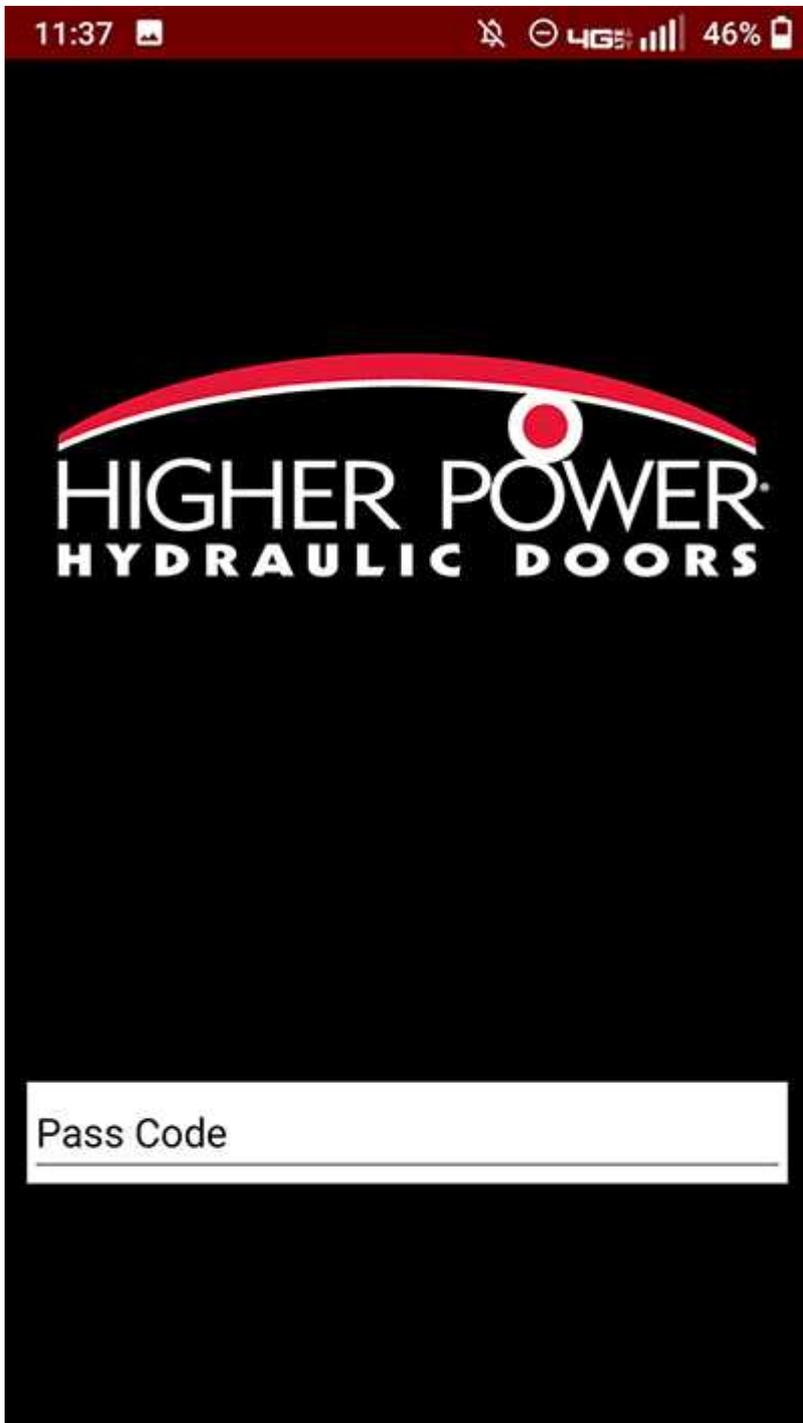

If you have previously connected to the receiver through the device wifi settings, it will look like below.


3. Tap **CONNECT TO RECEIVER**.

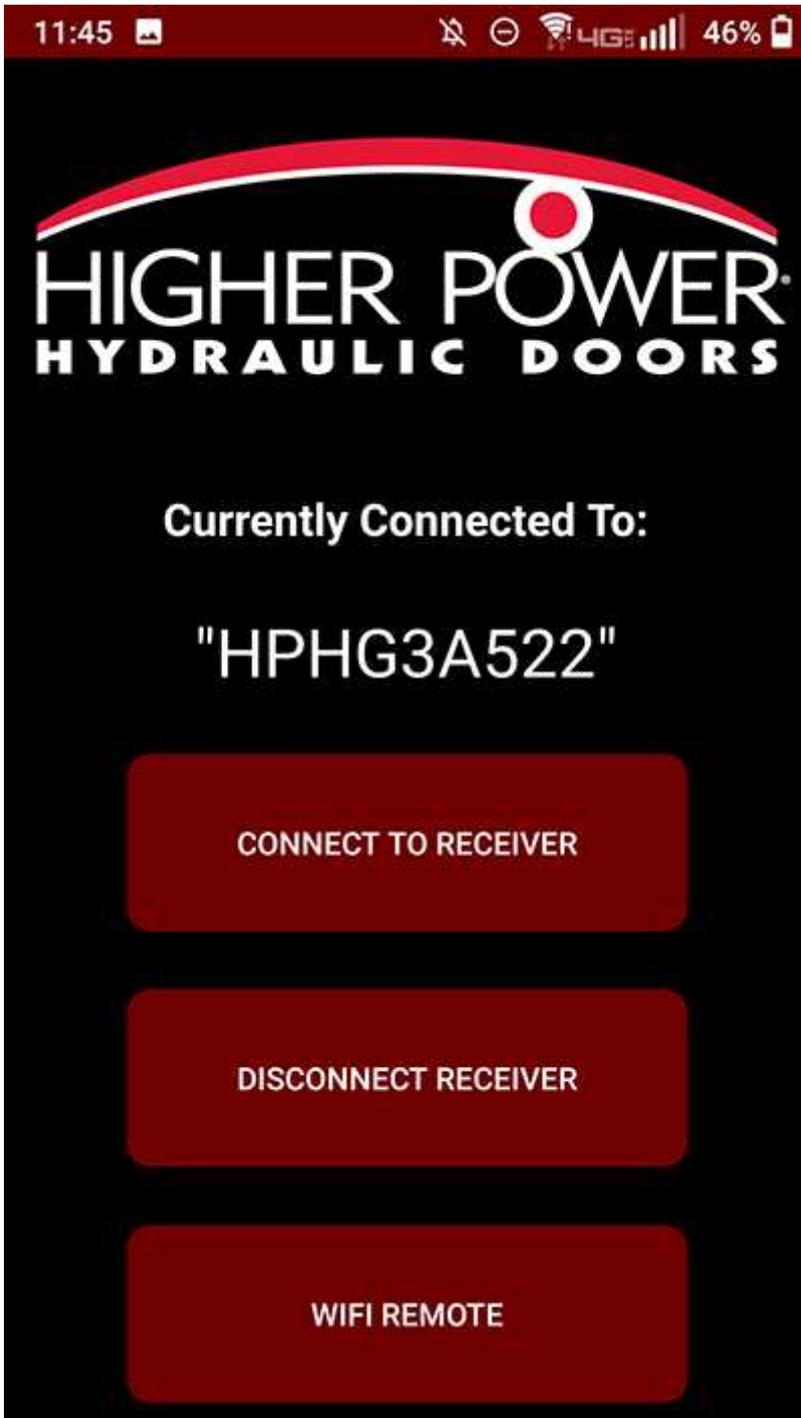

4. Select the receiver from the list of door names. If you do not see the door name, simply touch the top of the app and without lifting your finger plug down.



5. Once you have selected the desired door name. Please enter password for the system's wifi connection.

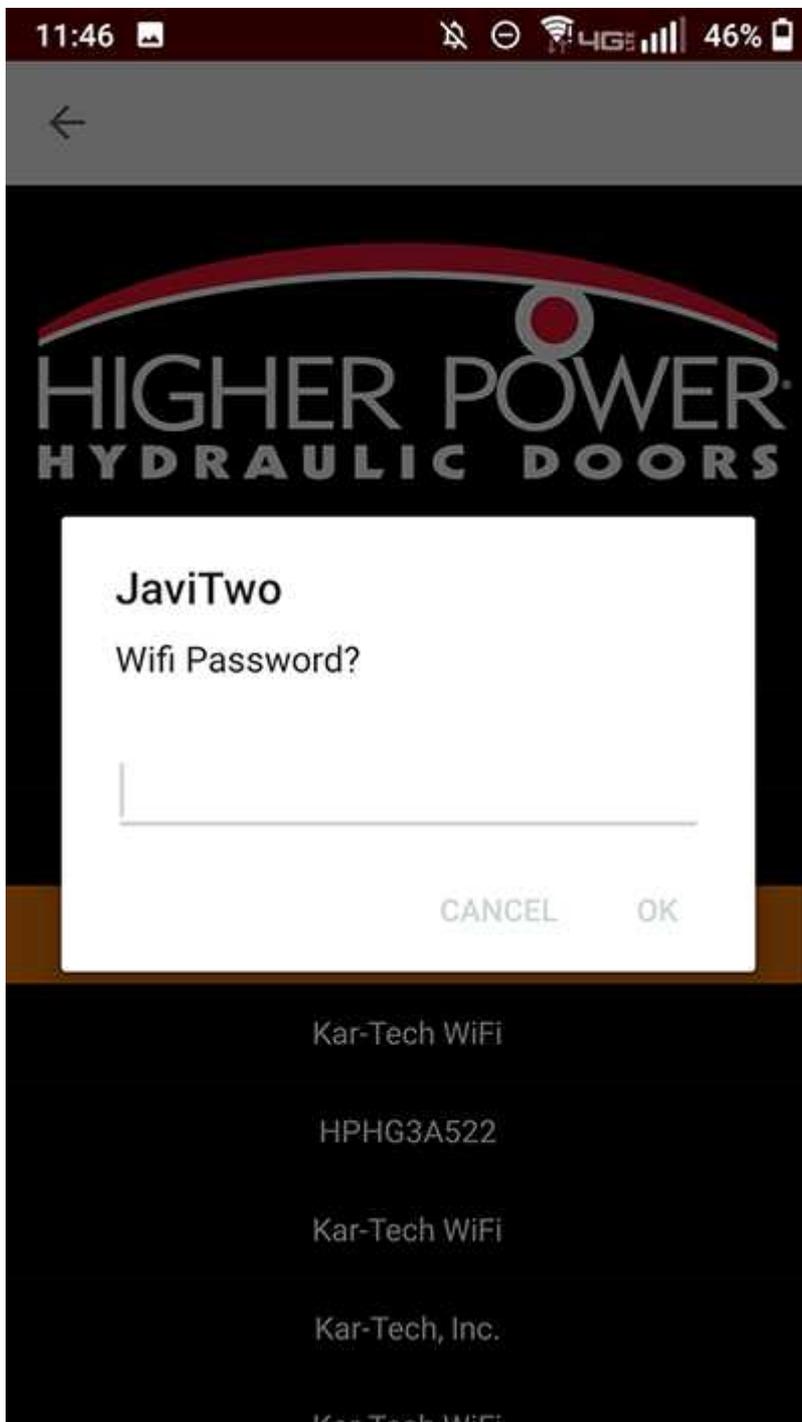

6. Wait for the connection to establish. It takes a few seconds. Once completed a button will show to take you back to the main screen.


11:46

4G 46%



HIGHER POWER
HYDRAULIC DOORS



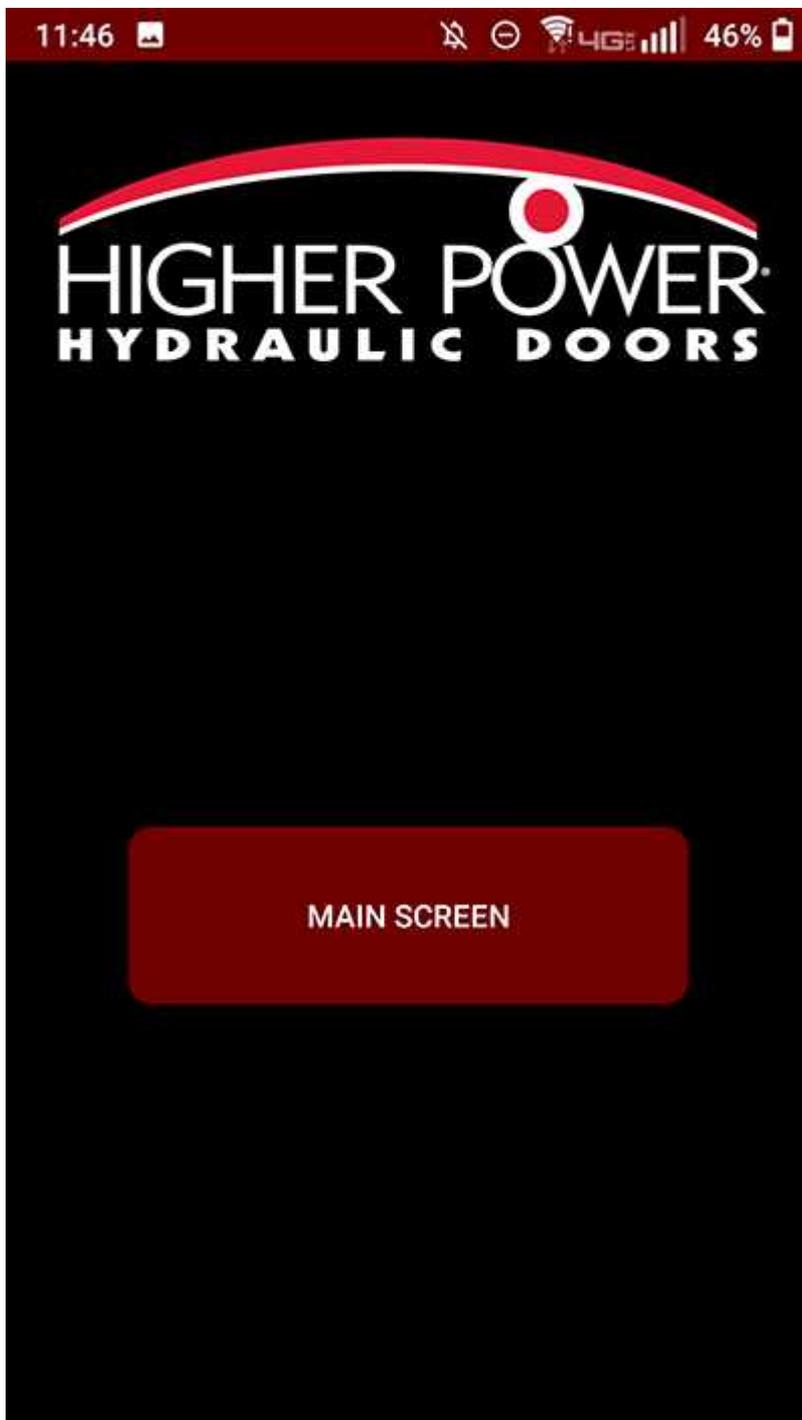

Troubleshooting

If a user cannot establish a connection to the desired receiver, please check device permissions and wifi settings.

Often when these issues arise the main screen will look like the following:

Wifi Not Enabled

11:37

4G 46%




Currently Connected To:

CONNECT TO RECEIVER

DISCONNECT RECEIVER

WIFI REMOTE

Location Not Available

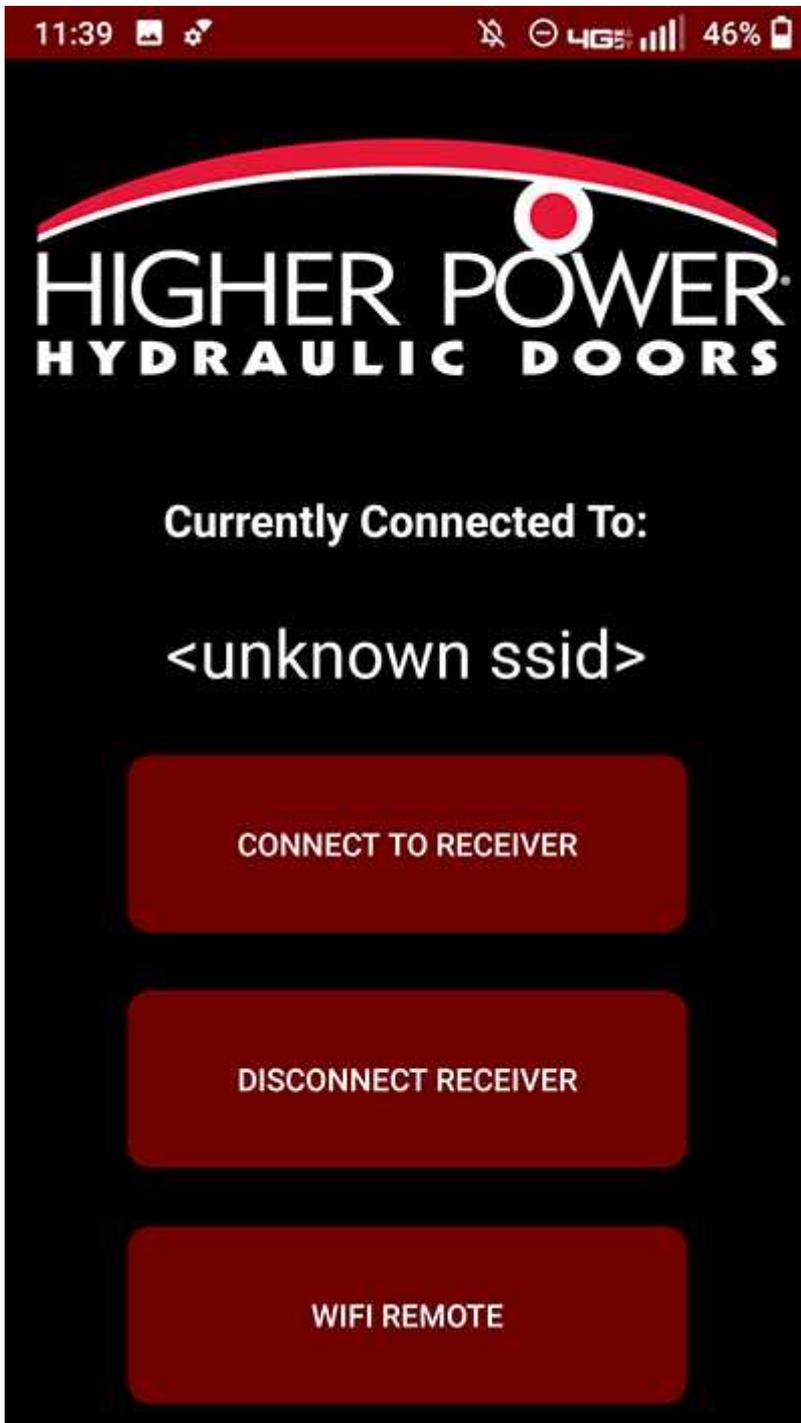

Device Permissions Required Before Software Use

Location Permission Enabled

iOS

Verify Phone Permissions



Android

Verify Phone Permissions

